 



B-BOX HIGH VOLTAGE INSTALLATION
SHORT INSTRUCTION
V 1.0

1.



BMU + Base

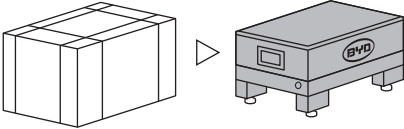



 
n=5-9 Module



  
2.

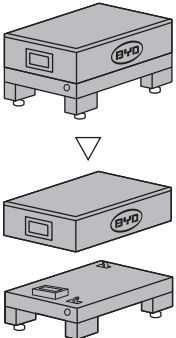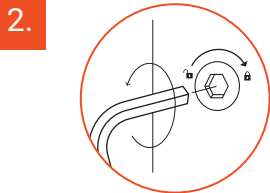

   
3.

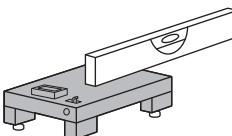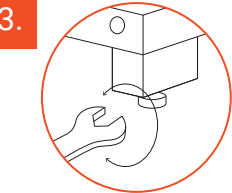



 
4.

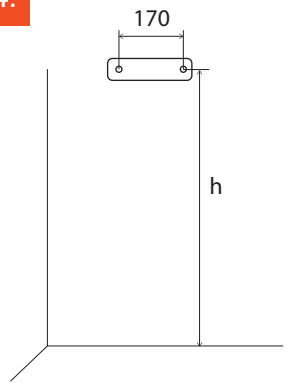




n	5	6	7	8	9
h	788	908	1028	1148	1268

 

  
 
5.

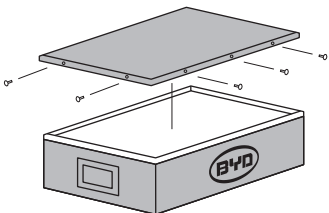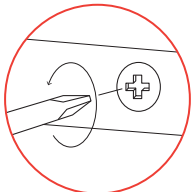

   
6.

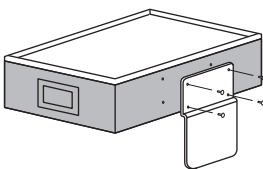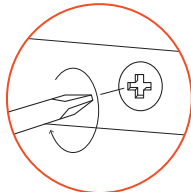

  7.

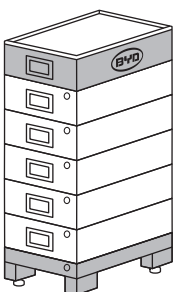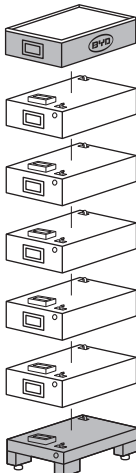

 8.

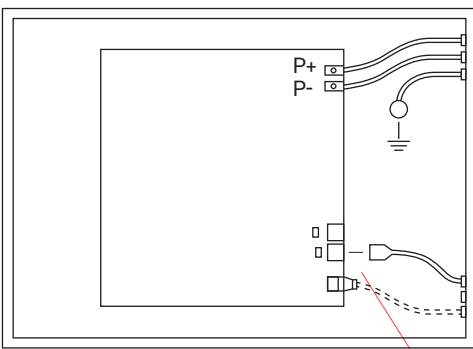


Inverter



P+ P- COM

Internet

 Ethernet cable


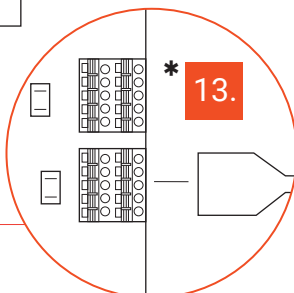


  9.

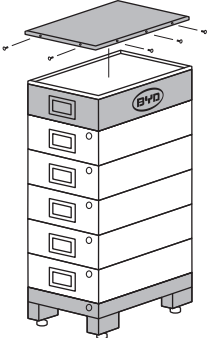

10a.

  ON

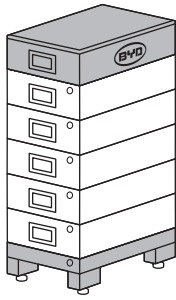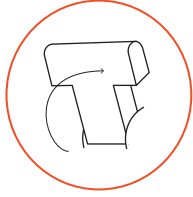

WLAN

BYDxxx

network 1

network 2

BYDxxx

WLAN password

123456789

cancel login

192.168.5.1. x

192.168.5.1.

BYDxxx

 
 
 
Username installer

Password byd@12345

cancel login

10b.

ON

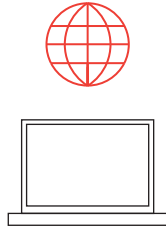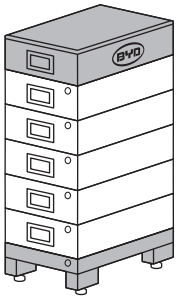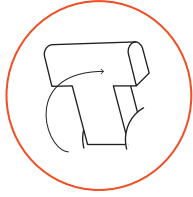

192.168.x.x. x

192.168.x.x.

BYDxxx

Username installer

Password byd@12345

cancel login

11.

History Alarm

Run Data

Set Password

User Information

Upgrade

Reboot and Restore

BYD Build Your Dreams

B-Box H

User Info

Server Ip Address: bbboxserver.byd.com.cn

Address/Position: Latitude 22 41 7 Longitude 114 15 27

Array Count: 1

Series Battery Count: 5

Install Time: 2017/10/14 9:42

State: 0

Inverter: SMA

User Name: null

Email: null

Telephone: null

Address: null

Country: null

Apply Cancel

Time and Date: 2017 07 19 13 16

Time Zone: UTC+0

Apply Cancel

Server Ip Address: bbboxserver.byd.com.cn

...

Series Battery Count: n

...

Apply

n=5-9 Module

12.

Run Data

Set Password

User Information

Upgrade

Reboot and Restore

Manage Parameter

BYD Build Your Dreams

B-Box H

 
Upgrade

Please input file: Durchsuchen... Keine Datei ausgewählt Upload

Please input file: Durchsuchen...


Upload

13a. SMA Sunny Boy Storage 2.5

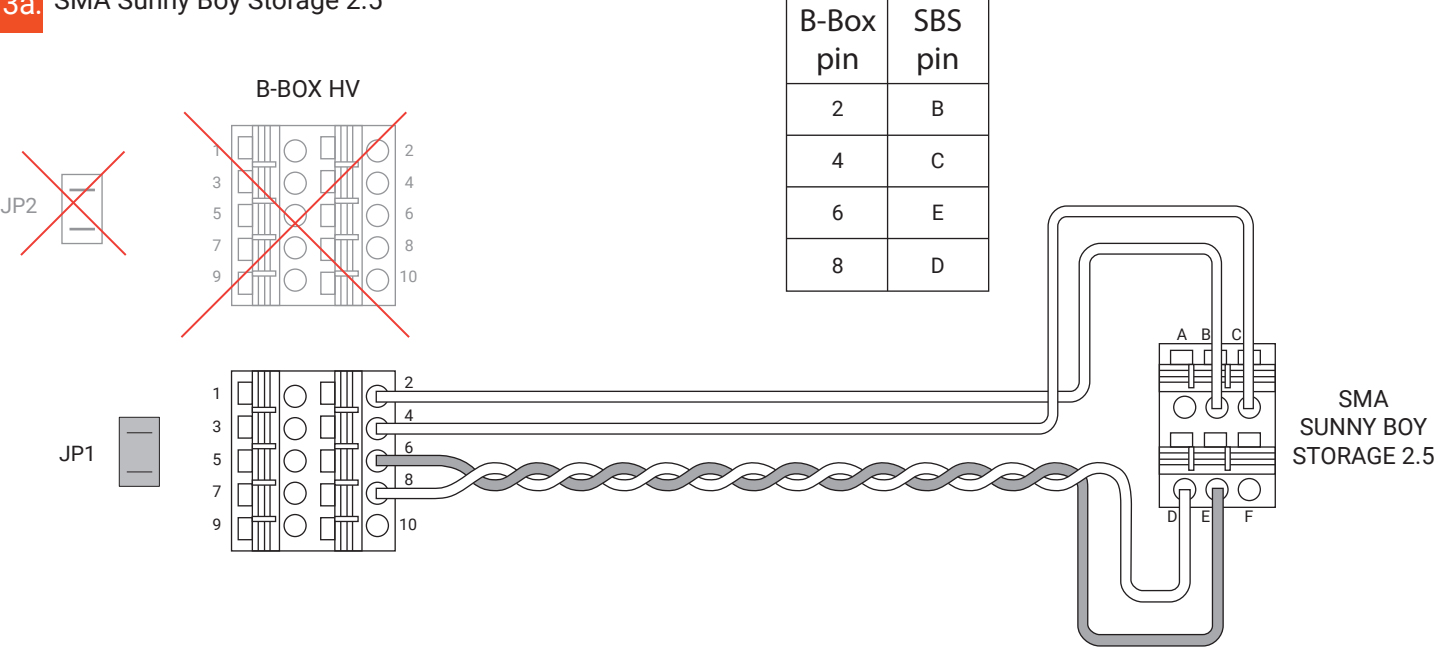

SMA Sunny Boy Storage 2.5 software version $\geq$ SBS2.5-V2.04.23

 13b. KOSTAL PIKO BA

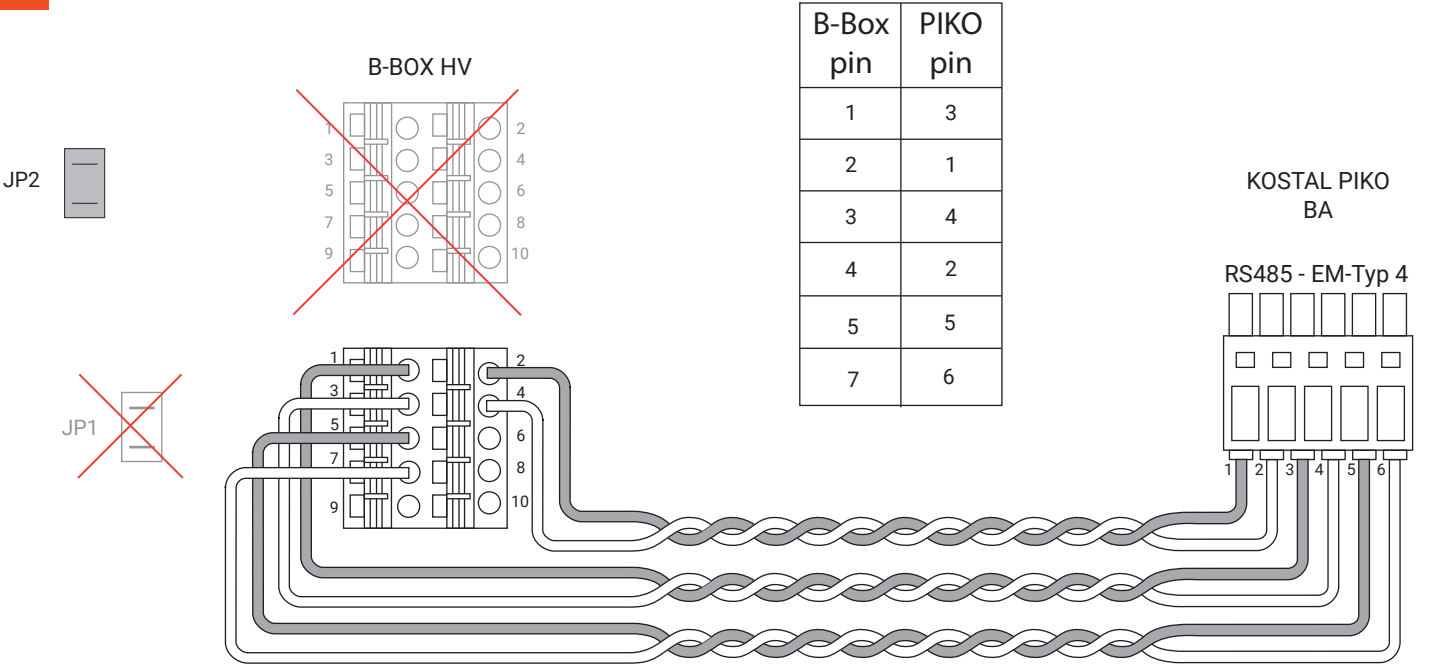

KOSTAL PIKO BA software version $\geq$ xxxxxxxxxxxxxxxx